
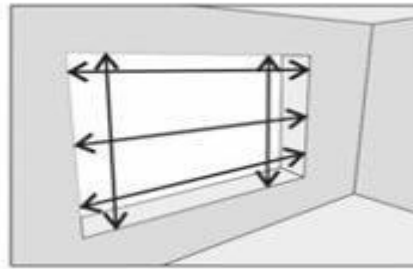


Recommendation for taking action

Inside Frame

Measure the width of the span in 3 points, top, middle and bottom. If they are different choose the smaller of the measures and subtract 0.5 cm to avoid false square.
 Measure the height of the span to the right and left. If they are different choose the smallest of the measures and subtract 1 cm.

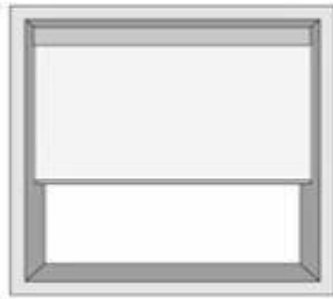

Outside Frame

Measure the width of the span, we recommend adding 5 cm to 10 cm from each side.
 Measure the height of the span, add 10 cm up and 10 cm down whenever possible.
 If your blind is Blackout it is recommended to add 15 or 20 cm on each side.

